Instruction Of ATP 9060E

This instruction is for the user of the Scale.

We hardly recommend that the user of this Scale to get a good acknowledge about all rules and the law.

Shown below is the LCD display.



LCD Indicator	Meaning
lbs, kg, lb _{oz} .	Indicates the unit of the displayed weight.
Battery (twinkle)	Indicates a low battery condition.
The rest of the symbols	Not used for this model.

If the object weight exceeds the scale's weight capacity, it displays "OVER".

Handling:

- 1. Press ON /OFF (**Red** Button) one time to start the scale (All symbols light then count down to zero).
- 2. Press one more time to switch off the scale.
- 3. If necessary, press ZERO (Green Button) to obtain a weight reading of zero.
- 4. Press UNIT (Yellow Button) to change the unit (lbs, kg and lb _{oz} cyclically).

General advice:

- 1. When the Scale is not in and is transported between different working places we recommend to use a case or any other protection against vibrations and other hard environmental conditions.
- 2. Protect the scale with a transparent plastic bag if there is any risk of leakage or when working in a wet environment.
- 3. Use only 9VDC battery.