

Installation guide

Pressure switch

KP 1, KP 1A, KP 5, KP 5A with gold plated contacts

060R9504


060R9504

Refrigerants:


R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R438A, R448A, R449A, R450A, R452A, R507A, R513A, R717*)

For complete list of approved refrigerants, go to <http://products.danfoss.com/all-products/>


*) only for KP 1A, KP 5A

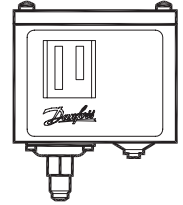


Mounting requirements

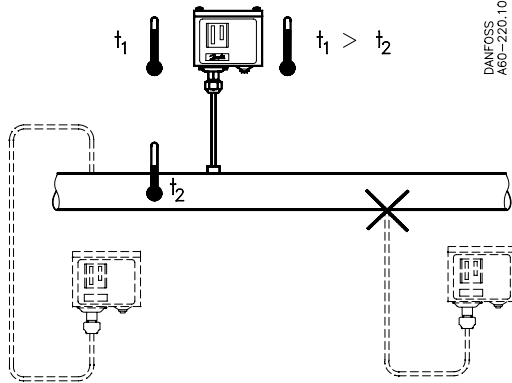


Ambient temperatures

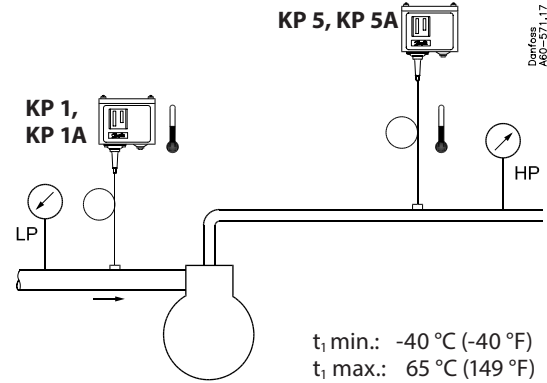


Connections

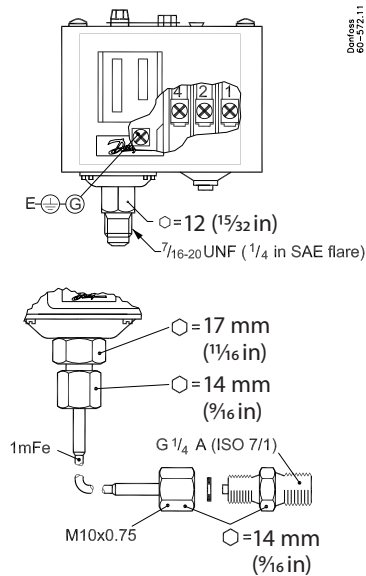

Mounting

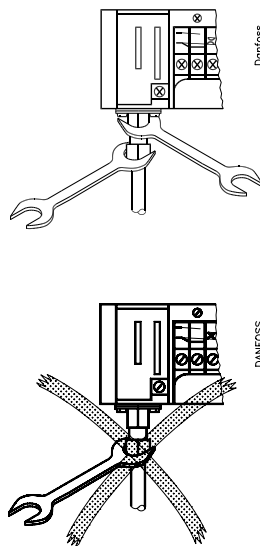

Test pressure (P_{test})

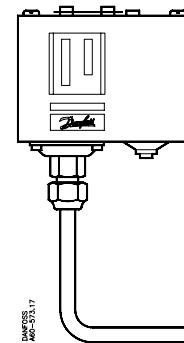


P_{test} max.

KP 1, KP 1A:
20 bar p_e (285 psig)


KP 5, KP 5A:
35 bar p_e (510 psig)

Type	Regulation range	PS/MWP
KP 1	-0.2 – 7.5 bar	17 bar/245 psig
KP 1 reset	-0.9 – 7 bar	17 bar/245 psig
KP 5	8 – 32 bar	35 bar/510 psig
KP 5 reset	8 – 32 bar	35 bar/510 psig


Enclosure

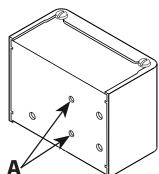


A: M4 (8 – 32 UNC)

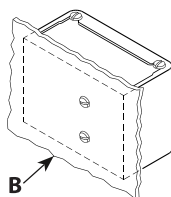

B: Enclosure IP30 (EN 60529)

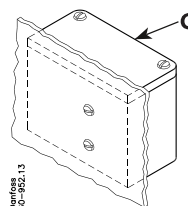

C: Enclosure IP44 (EN 60529)

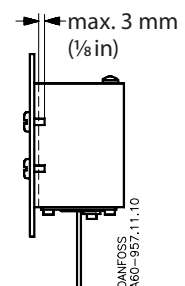





CAUTION:

Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or damage to equipment. Do never touch live parts with your fingers or with any tool.



Contact 1-4 opens on pressure drop

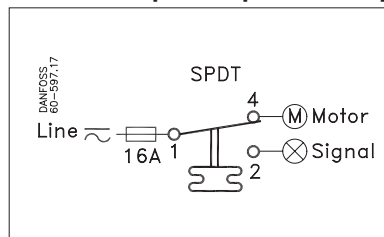

KP 1, KP 1A

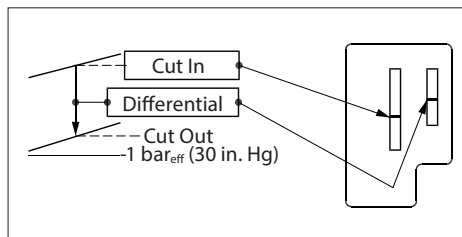


Setting

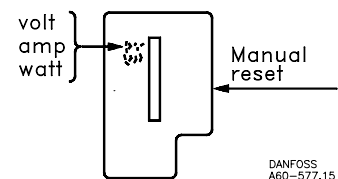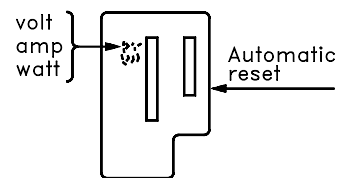


DANFOSS
A60-577.15

Contact 1-2 opens on pressure rise

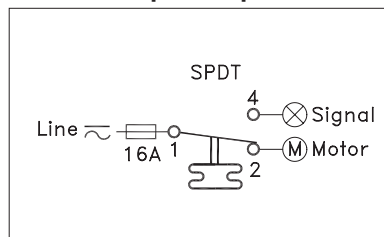

KP 5, KP 5A

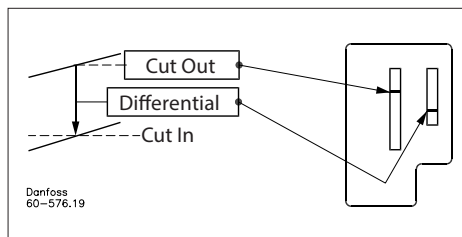


Danfoss
60-576.19

Contact load

Regulation	Max.	30 mA/30 V DC
	Min.	1 mA/5 V DC
Alarm (Au surface is burnt away)	AC1:	10 A/400 V
	AC3:	6 A/400 V
	AC15:	4 A/400 V
	DC13:	12 W/220 V

Manual trip function


Automatic reset

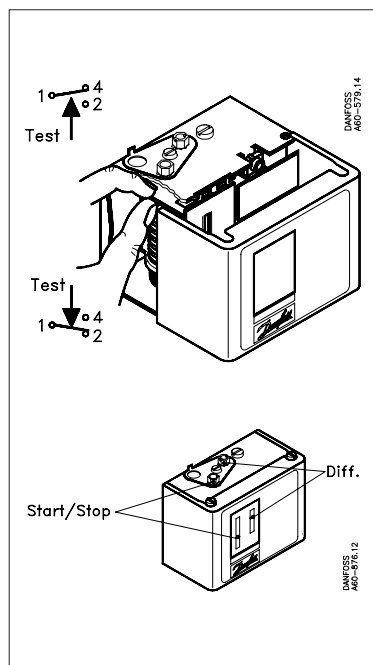

DANFOSS
A60-579.14

DANFOSS
A60-576.12

Manual reset

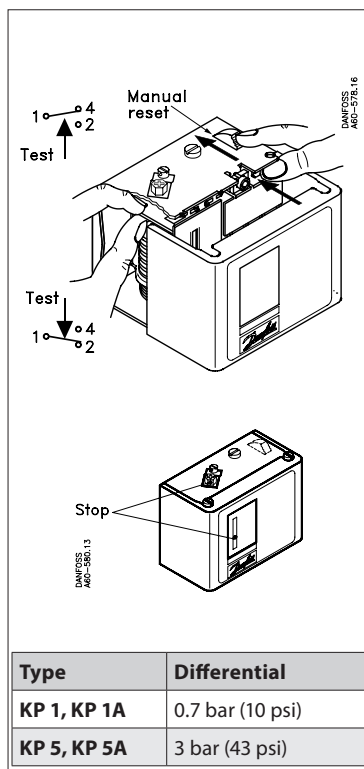


DANFOSS
A60-576.16

DANFOSS
A60-580.13

Type	Differential
KP 1, KP 1A	0.7 bar (10 psi)
KP 5, KP 5A	3 bar (43 psi)


Adjustment

 Range




KP 1, KP 1A: 0.7 bar (10 psi)/rev.
KP 5, KP 5A: 2.3 bar (33 psi)/rev.

 Differential



KP 1, KP 1A: 0.2 bar (3 psi)
KP 5, KP 5A: 0.3 bar (4 psi)

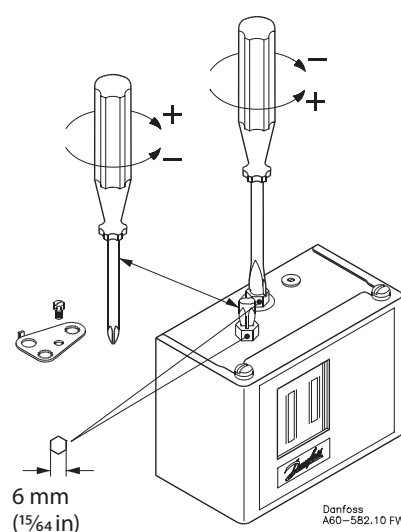

Danfoss
A60-582.10 FW

NOTE:
use FINGERS ONLY!
(Do NOT use screwdriver)