



ECP 200 EXPERT + BASE 2 / 4



USE AND MAINTENANCE MANUAL

CONTENTS

INTRODUCTION

Page 4	1.1	General
Page 4	1.2	Product ID codes
Page 5	1.3	Overall dimensions
Page 5	1.4	Identification data

CHAP. 1

INSTALLATION

Page 6	2.1	Important information for the installer
Page 6	2.2	Standard assembly kit
Page 6	2.3	Installing the unit

CHAP. 2

FUNCTIONS

Page 8	3.1	ECP200 EXPERT+BASE panel functions
--------	-----	------------------------------------

CHAP. 3

TECHNICAL CHARACTERISTICS

Page 9	4.1	Technical characteristics
Page 10	4.2	Warranty

CHAP. 4

PARAMETER PROGRAMMING

Page 11	5.1	Control panel
Page 11	5.2	Frontal keypad
Page 12	5.3	LED display
Page 13	5.4	General
Page 13	5.5	Key to symbols
Page 13	5.6	Setting and displaying set points
Page 14	5.7	Level 1 programming
Page 15	5.8	List of Level 1 variables
Page 16	5.9	Level 2 programming
Page 16	5.10	List of Level 2 variables
Page 18	5.11	Switching on the ECP200 EXPERT+BASE electronic controller
Page 18	5.12	Compressor activation/deactivation conditions
Page 18	5.13	Manual defrosting
Page 19	5.14	Hot gas defrosting
Page 19	5.15	Pump down function
Page 19	5.16	Password protection

CHAP. 5

OPTIONAL KITS

Page 20	6.1	<i>TeleNET</i> monitoring / supervision system
Page 20	6.2	Net configuration with Modbus-rtu protocol
Page 21	6.3	ALARM RELAY / RS485 switching

CHAP. 6

TROUBLESHOOTING

Page 22	7.1	Troubleshooting
---------	-----	-----------------

CHAP. 7

ALLEGATI / APPENDICES

Page 23	A.1	EC declaration of conformity
Page 24	A.2	ECP200 EXPERT+BASE 4 wiring diagram
Page 25	A.3	ECP200 EXPERT+BASE 4A wiring diagram
Page 26	A.4	ECP200 EXPERT+BASE 2 wiring diagram
Page 27	A.5	ECP200 EXPERT+BASE 2A wiring diagram
Page 28	A.6	Connection example (1) - ECP200 EXPERT+BASE4 /BASE4A
Page 29	A.7	Connection example (2) - ECP200 EXPERT+BASE4 /BASE4A
Page 30	A.8	Connection example (3) - ECP200 EXPERT+BASE2 /BASE2A
Page 31	A.9	Connection example (4) - ECP200 EXPERT+BASE2 /BASE2A

CHAPTER 1: INTRODUCTION

1.1

GENERAL

The electronic controllers of the **ECP200 EXPERT+BASE** series have been designed to control static or ventilated cold rooms.

The **ECP200 EXPERT + BASE 4** electronic board allows the user to control all the components on a refrigeration unit such as compressor, evaporator fans, defrosting elements and cold room light.

The applications are:

- single-phase static or ventilated refrigeration systems up to 2 HP, with off-cycle or electrical defrosting
- out of room unit to be connected to power board for compressor, defrosting and fan start.
- single-phase evaporator control unit with cold solenoid consensus or remote condensing unit consensus

The **ECP200 EXPERT + BASE 2** electronic board allows the user to control the compressor and room light.

The applications are:

- single-phase refrigeration systems up to 2 HP with off-cycle defrosting.
- out of room unit to be connected to power board for compressor start.

The ABS controller box is simple to install and can easily be wall-mounted as the **ECP200 EXPERT+BASE** is extremely compact and features an IP65 protection rating.

1.2

PRODUCT ID CODES

ECP200 EXPERT + BASE 2

controls and manages compressor and room light.

ECP200 EXPERT +BASE 2 A

controls and manages compressor and room light.
Alarms relay.

ECP200 EXPERT +BASE 4

controls and manages compressor, defrosting elements, evaporator fans and room light.

ECP200 EXPERT +BASE 4 A

controls and manages compressor, defrosting elements, evaporator fans and room light. Alarms relay.

OVERALL DIMENSIONS

1.3



IDENTIFICATION DATA

1.4

The unit described in this manual has an ID plate on the side showing all the relevant identification data:

- Name of Manufacturer
- Code and model of unit electrical board
- Serial number
- IP protection rating
- Power supply



CHAPTER 2: INSTALLATION

2.1

IMPORTANT INFORMATION FOR THE INSTALLER

1. Install the device in places where the protection rating is observed and try not to damage the box when drilling holes for wire/pipe seats.
2. Do not use multi-polar cables in which there are wires connected to inductive/power loads or signalling wires (e.g. probes/sensors and digital inputs).
3. Do not fit power supply wiring and signal wiring (probes/sensors and digital inputs) in the same raceways or ducts.
4. Minimise the length of connector wires so that wiring does not twist into a spiral shape as this could have negative effects on the electronics.
5. Fit a general protection fuse upstream from the electronic controller.
6. All wiring must be of a cross-section suitable for relevant power levels.
7. When it is necessary to make a probe/sensor extension, the wires must have a cross-section of at least 1 mm².

2.2

STANDARD ASSEMBLY KIT

For the purposes of assembly and use, the electronic **ECP200 EXPERT+BASE** control unit comes with:

- N° 3 seals, to be fitted between the fixing screws and the box back panel
- N° 1 user's manual.

2.3

INSTALLING THE UNIT

Fig. 1: Raise the transparent cover that shields the magneto-thermal cut-out switch and remove the screw cover on the right-hand side.



Fig. 2: Undo the 4 fixing screws at the front of the box.



Fig. 3: Close the transparent cut-out switch cover.



Fig. 4: Open the front of the box, lift it and slide the two hinges out as far as they will go.



Fig. 5: Press on the sides of the hinges to remove them from their seats and so remove the front panel completely.

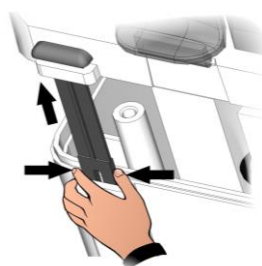


Fig. 6: Use the three existing holes to fix the box back panel to the wall: use three screws of a length suitable for the thickness of the wall to which the panel will be attached. Fit a rubber washer (supplied) between each screw and the box backing.


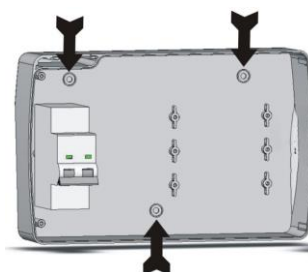


Fig. 7: Hook the frontal panel back up to the lower part of the box by inserting the two hinges in their seats and, bending them, rotate downwards 180° to gain access to the electronic board.

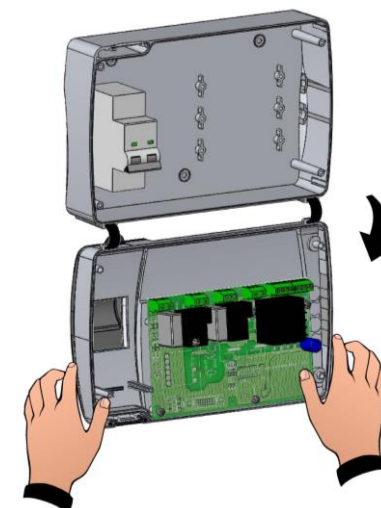

Make all the electrical connections as illustrated in the diagram for the corresponding model (see relative table in APPENDICES).

To effect correct electrical connection and maintain the protection rating, use appropriate wire/raceway grips to ensure a good seal.

Route the wiring inside the unit in as tidy a fashion as possible: be especially careful to keep power wires away from signal wires. Use clips to hold wires in place.



Fig. 8: close the front panel, making sure that all the wires are inside the box and that the box seal sits in its seat properly.

Tighten the front panel using the 4 screws, making sure the O-rings on the head of each screw are used.

Power up the panel and carry out thorough reading/programming of all the parameters.



Be careful not to over-tighten the closure screws as this could warp the box and compromise proper operation of the membrane-type keypad.

Install short-circuit overload safety devices on all the power cables connected to the ECP200 EXPERT so as to prevent damage to the device. Work and/or maintenance must ONLY be carried out on the unit after disconnecting the panel from the power supply and from any inductive/power loads: doing so allows the worker to do his job safely.



CHAPTER 3: FUNCTIONS

3.1

ECP200 EXPERT+ BASE PANEL FUNCTIONS

- Display and adjustment of cold room temperature accurate to 0.1 °C.
- Display of evaporator temperature from parameter
- System control activation/deactivation
- System warnings (probe/sensor errors, minimum and maximum temperature warnings, compressor shutdown)
- Evaporator fans control
- Automatic and manual defrost (static, heating element, cycle inversion)
- Direct control of compressor unit up to 2 HP
- Room light, via panel key or door switch
- Alarms/auxiliary relay

CHAPTER 4: TECHNICAL CHARACTERISTICS

TECHNICAL CHARACTERISTICS

4.1

Power supply				
Voltage		230 V~ ± 10% 50Hz / 60Hz		
Max power (only electronics)		~ 7 VA		
Rated current (With all loads connected)		16A		
Cold room conditions				
Working temperature		-5 ÷ +50°C		
Storage temperature		-10 ÷ +70°C		
Relative humidity		Less than 90%		
General characteristics				
Type of sensors that can be connected		NTC 10K 1%		
Resolution		0,1 °C.		
Sensor read precision		± 0,5 °C		
Read range		-45 ÷ +45 °C		
Output characteristics				
Description	Installed relay	Card output characteristics	BASE 2	BASE4
Compressor	(Relay 30A AC1)	10A 250V~ (AC3) (2HP) (100000 cycles)	X	X
Elements	(Relay 30A AC1)	16A 250V~ (AC1)		X
Fans	(Relay 16A AC1)	2,7A 250V~ (AC3)		X
Room light	(Relay 16A AC1)	16A 250V~ (AC1)	X	X
Alarm / Aux (non-powered contact)	(Relay 8A AC1)	8(3)A 250V~	X optional	X optional
Dimensional characteristics				
Dimensions		16.8cm x 9.7cm x 26.2cm (HxPxL)		
Insulation / mechanical characteristics				
Box protection rating		IP65		
Box material		ABS autoestinguente		
Type of insulation		Class II		

4.2

WARRANTY

The electronic controllers in the **ECP200 EXPERT+BASE series** are covered by a 24-month warranty against all manufacturing defects, valid from date of delivery. If the system malfunctions as a result of tampering, impact or improper installation the warranty will automatically be rendered null and void. It is strongly recommended that you observe all instructions/information regarding the technical characteristics of the device.

**WARNING !**

Any modifications made to wiring and/or internal components or any work carried out in a way that fails to comply with the information/instructions in this manual shall render the warranty null and void immediately. Modifications/improper work may cause malfunctions, irreparable damage, serious injury or put persons/objects in danger.



PEGO S.r.l. cannot be held liable for possible errors or inaccuracies written in this manual as a result of printing or transcription errors.

PEGO S.r.l. reserves the right to modify its products as it deems necessary without altering its main characteristics. Each new release of a **PEGO** user manual replaces previous ones.

CHAPTER 5: PARAMETER PROGRAMMING


CONTROL PANEL






5.1

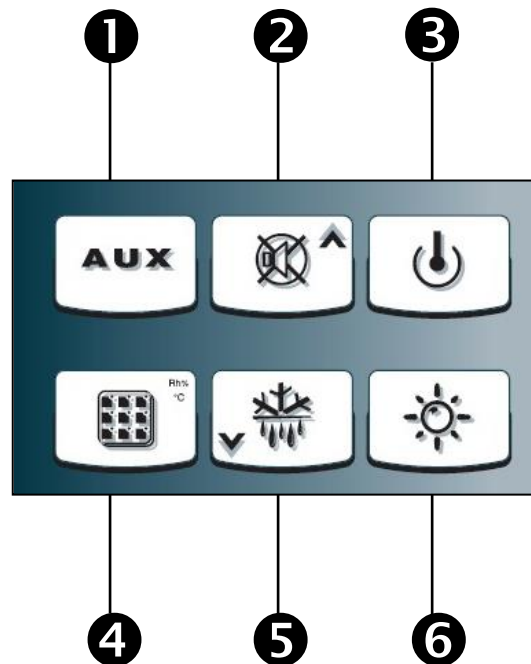

FRONT KEYPAD


5.2



1. **AUX** key: **AUXILIARY RELAY CONTROL** (on the version with alarm relay controls the relay manual if parameter AU=1)
2.  key: **UP / MUTE WARNING BUZZER**
3.  key: **STAND BY** (if the system shuts down the LED flashes)
4.  key: room temperature **SETTING**
5.  key: **DOWN / MANUAL DEFROST**
6.  key: **ROOM LIGHT**

LED DISPLAY

5.3

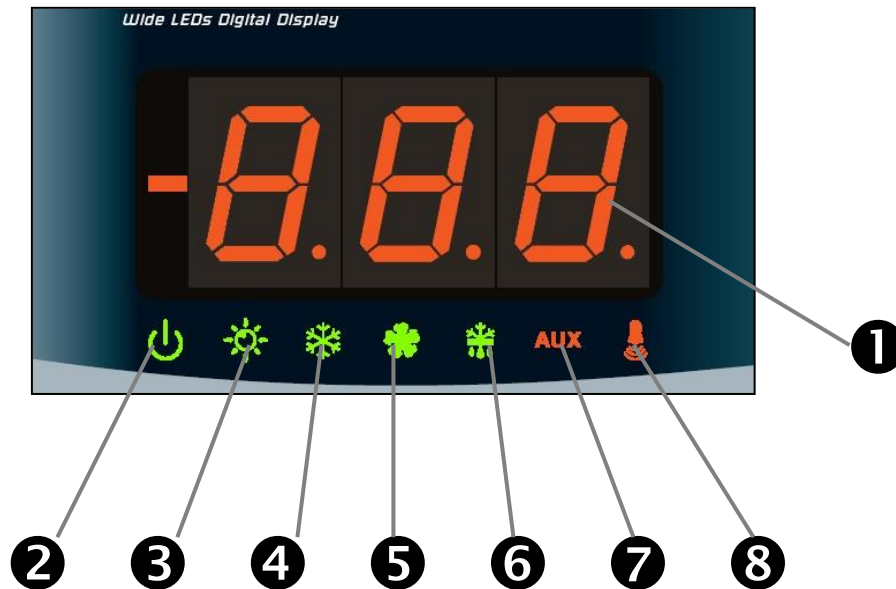

1. Cold room temperature / parameters
2. Stand-by (flashes on stand-by. Outputs are deactivated)
3. Room light (flashes if door switch activated)
4. Cold (indicates activation of compressor)
5. Fans
6. Defrosting
7. Auxiliary
8. Alarm/warning

5.4

GENERAL



To enhance safety and simplify the operator's work, the **ECP200 EXPERT+BASE system** has two programming levels; the first level (Level 1) is used to configure the frequently-modified **SETPOINT** parameters. The second programming level (Level 2) is for general parameter programming of the various controller work modes.

It is not possible to access the Level 2 programming directly from Level 1: you must exit the programming mode first.

5.5

KEY TO SYMBOLS

For purposes of practicality the following symbols are used:

- (▲) the UP key  is used to increase values and mute the alarm.
- (▼) the DOWN key  is used to decrease values and force defrosting.

5.6

SETTING AND DISPLAYING THE SET POINTS

1. Press the **SET key** to display the current **SETPOINT** (temperature)
2. Hold down the **SET key** and press the (▲) or (▼) keys to modify the **SETPOINT**.

Release the **SET key** to return to cold room temperature display: the new setting will be saved automatically.

LEVEL 1 PROGRAMMING (User level)

5.7

To gain access to the Level 1 configuration menu proceed as follows:

1. Press the (▲) and (▼) keys simultaneously and keep them pressed for a few seconds until the first programming variable appears on the display.
2. Release the (▲) and (▼) keys.
3. Select the variable to be modified using the (▲) or (▼) key.
4. When the variable has been selected it is possible:
 - to display the setting by pressing SET key
 - to modify the setting by pressing the SET key together with the (▲) or (▼) key.

When configuration values have been set you can exit the menu by pressing the (▲) and (▼) keys simultaneously for a few seconds until the cold room temperature reappears.

5. The new settings are saved automatically when you exit the configuration menu.

5.8

LIST OF LEVEL 1 VARIABLES (User level)

VARIABLES	MEANING	VALUE	DEFAULT
<i>r0</i>	Temperature difference compared to main SETPOINT	0.2 - 10 °C	2°C
<i>d0</i>	Defrost interval (hours)	0 - 24 hours	4 hours
<i>d2</i>	End-of-defrost setpoint. Defrost is not executed if the temperature read by the defrost sensor is greater than <i>d2</i> (If the sensor is faulty defrosting is timed)	-35 - 45 °C	15°C
<i>d3</i>	Max defrost duration (minutes)	1 - 60 min	25 min
<i>d7</i>	Drip duration (minutes) At the end of defrost the compressor and fans remain at standstill for time <i>d7</i> , the defrost LED on the front panel flashes.	0 - 10 min	0 min
<i>F5</i>	Fan pause after defrost (minutes) Allows fans to be kept at standstill for a time <i>F5</i> after dripping. This time begins at the end of dripping. If no dripping has been set the fan pause starts directly at the end of defrost.	0 - 10 min	0 min
<i>A1</i>	Minimum temperature alarm Allows user to define a minimum temperature for the room being refrigerated. Below value <i>A1</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	-	-45°C
<i>A2</i>	Maximum temperature alarm Allows user to define a maximum temperature for the room being refrigerated. Above value <i>A2</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	-	+45°C
<i>tEu</i>	Evaporator sensor temperature display	Displays evaporator temperature (displays nothing if dE =1)	read only

LEVEL 2 PROGRAMMING (Installer level)

5.9

To access the second programming level press the UP (▲) and DOWN (▼) keys and the LIGHT key simultaneously for a few seconds.

When the first programming variable appears the system automatically goes to stand-by.

1. Select the variable to be modified by pressing the UP (▲) and DOWN (▼) keys.

When the parameter has been selected it is possible to:

2. View the setting by pressing the SET key.

3. Modify the setting by holding the SET key down and pressing the (▲) or (▼) key.

4. When configuration settings have been completed you can exit the menu by pressing the (▲) and (▼) keys simultaneously and keeping them pressed until the room temperature reappears.

5. Changes are saved automatically when you exit the configuration menu.

6. Press the STAND-BY key to enable electronic control.

LIST OF LEVEL 2 VARIABLES (Installer level)

5.10

VARIABLES	MEANING	VALUES	DEFAULT
AC	Door switch status	0= normally open 1= normally closed	0
F3	Fan status with compressor off	0 = Fans run continuously 1 = Fans only run when compressor is working	1
F4	Fan pause during defrost	0 = Fans run during defrost 1 = Fans do not run during defrost	1
dE	Sensor presence If the evaporator sensor is disabled defrosts are carried out cyclically with period d0: defrosting ends when an external device trips and closes the remote defrost contact or when time d3 expires.	0 = evaporator sensor present 1 = no evaporator sensor	0
d1	Defrost type , cycle inversion (hot gas) or with heater elements	1 = hot gas 0 = heater element	0
Ad	Net address for connection to TeleNET supervision system or Modbus	0 ÷ 31 (with AU=3) 1 ÷ 247 (with AU=7)	0
Ald	Minimum and maximum temperature signalling and alarm display delay	1...240 min	120 min
C1	Minimum time between shutdown and subsequent switching on of the compressor .	0...15 min	0 min
CAL	Cold room sensor value correction	-10...+10	0
Pc	Compressor protection contact status	0 = NO 1 = NC	0 = NO

doC	Compressor safety time for door switch: when the door is opened the evaporator fans shut down and the compressor will continue working for time doC , after which it will shut down.	0...5 minutes	0
tdo	Compressor restart time after door opening. when the door is opened and after tdo time, it's setted back the normal functioning giving door open alarm (Ed) With tdo=0 the parameter is disabled.	0...240 min 0 = disabled	0
Fst	FAN shutdown TEMPERATURE The fans will stop if the temperature value read by the evaporator sensor is higher than this value.	-45...+45°C	+45°C
Fd	Fst differential	0...+10°C	2°C
LSE	Minimum value attributable to setpoint.	-45... HSE °C	-45°C
HSE	Maximum value attributable to setpoint.	+45... LSE °C	+45°C
tA	NO – NC alarm relay switching	0 = activates when alarm is on 1 = deactivates when alarm is on	1
AU	Auxiliary/alarm relay control	0 = alarm relay 1 = manual auxiliary relay controlled via AUX key 2 = automatic auxiliary relay managed by StA temp. setting with 2°C differential 3 = relay disabled / TeleNET function 4 = pump down function (see CHAP 5.15) 5 = free voltage contact for condensing unit (AUX relay and compressor relay in parallel) 6 = Contact for casing element control (AUX relay closed with compressor output inactive). 7 = relay disabled / Modbus-RTU function	0
StA	Temp. setting for aux. relay	-45...+45°C	0
In1	Man in cold room alarm Select input INP1 on the board as <i>compressor protection alarm</i> or as <i>man in cold room alarm</i> (contact NC).	0 = compressor protection 1 = man in room alarm	0
P1	Password type of protection (active when PA is not equal 0)	0 = only display set point 1 = display set point, AUX, light access 2 = access in programming not permitted 3 = access in second level programming not permitted	3
PA	Password (see P1 for the type of protection)	0...999 0 = not active	0

<i>reL</i>	Software release	indicates software version	Read only
------------	------------------	----------------------------	-----------

5.11**SWITCHING ON THE ECP200 EXPERT+BASE ELECTRONIC CONTROLLER**

After wiring the electronic controller correctly, power up at 230 V AC; the display panel will immediately emit a beep and all the LEDs will come on simultaneously for a few seconds.

5.12**COMPRESSOR ACTIVATION/DEACTIVATION CONDITIONS**

The **ECP200 EXPERT+BASE** controller activates the compressor when cold room temperature exceeds setting+differential (r0); it deactivates the compressor when cold room temperature is lower than the setting.

5.13**MANUAL DEFROSTING**

To defrost just press the dedicated key (see section 5.2) to activate the elements relay. Defrosting will not take place if the end-of-defrost temperature setting (d2) is lower than the temperature detected by the evaporator sensor. Defrosting ends when the end-of-defrost temperature (d2) or maximum defrost time (d3) is reached.

HOT GAS DEFROSTING**5.14**

Set parameter d1 =1 to defrost in cycle inversion mode.

The compressor relay and defrost relay are activated throughout the defrost phase.

To ensure proper control of the system the installer must use the defrost output: this must allow opening of the cycle inversion solenoid valve and closure of the liquid solenoid valve. For capillary systems (without thermostat valve) it is only necessary to control the cycle inversion solenoid valve via the defrost relay control.

PUMP DOWN FUNCTION**5.15**

Pump down function is activated when parameter AU=4 (only for version with AUX/Alarm relay).

Connect pump down pressostat on the digital input 1-3. The compressor is directly controlled by pressostat.

Connect evaporator solenoid valve on the AUX relay. The solenoid is controlled directly by thermostat.

PASSWORD FUNCTION**5.16**

When parameter PA is setting with value different to 0 the protection function is activated.

See parameter P1 for the different protection.

When PA is setting the protection start after two minutes of inactivity. On display appear 000. With up/down modify the number, with set key confirm it.

Use universal number 100 if you don't remember the password.


CHAPTER 6: OPTIONAL KITS

6.1

TELENET MONITORING AND SUPERVISION SYSTEM

For **TeleNET** connections to enable RS485 as indicated at chapter 6.3 and follow the scheme below. Refer to **TeleNET** user manual for instrument configuration.

WARNING: During configuration, at entry "Module" to select the entry "Instrument ECP Base Series / ECP Expert Series".

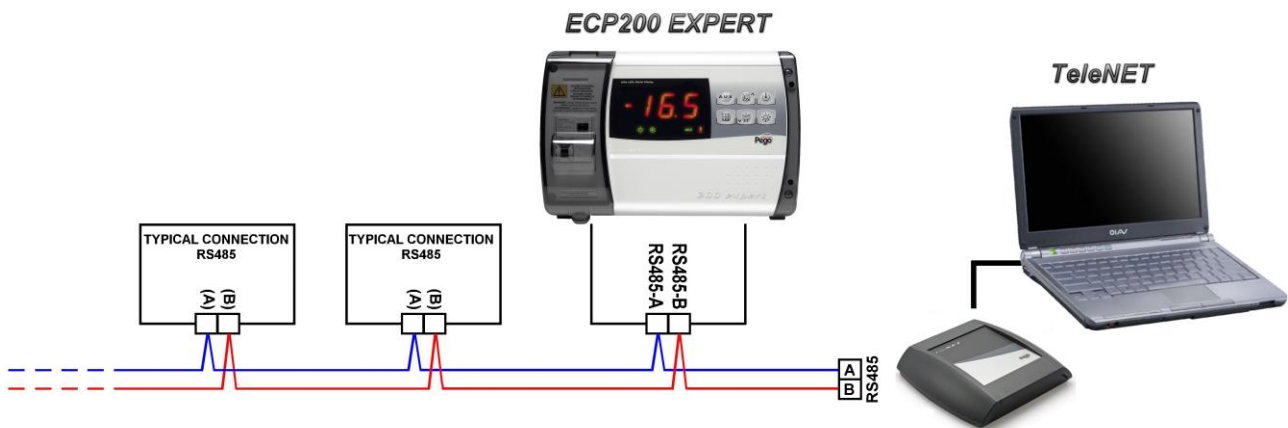


6.2

NET CONFIGURATION WITH MODBUS-RTU PROTOCOL

For **RS485** connections with **Modbus-RTU** protocol, to enable RS485 output as indicated at chapter 6.3 and follow the scheme below.

Refer to MODBUS-RTU_ECP200T1 user manual (available on Pego Internet web site) for MODBUS-RTU communication protocol specification.

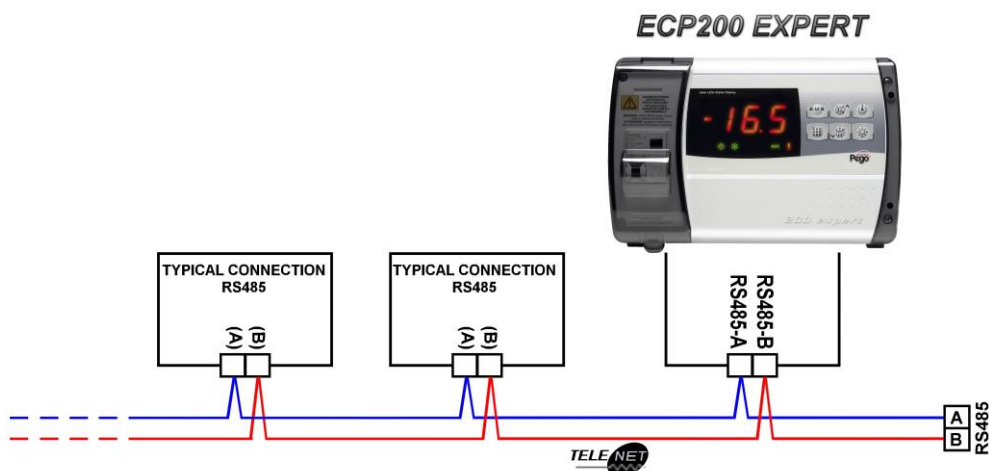


ALARM RELAY / RS485 SWITCHING

6.2

Open the front of the box as described in Chap. 2.3 (page 6): rotate it downwards 180° to gain access to the electronic board.

Undo the 6 CPU board fixing screws: remove the board from the frontal part of the box in ABS.

Configure the jumper from JUMPER JP2 (placed on the front of electrical board near the display far down on the right) following one of the ensuing options.

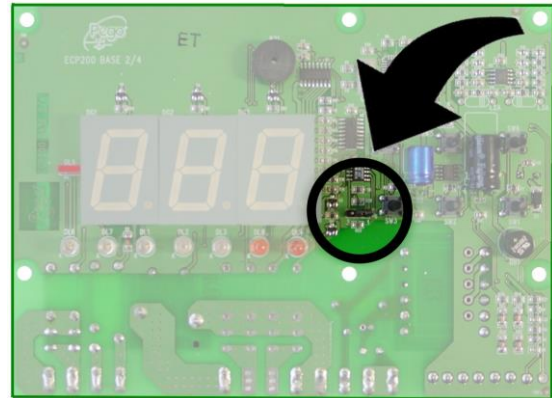**RS485 output selection:**

Insert the jumper JP2 on 3-2 position and set the 2nd level variable


AU=3 (TeleNET)

or

AU=7 (Modbus-RTU).


The connection clamps are RS485 (A) and RS485 (B) on board of electrical board. Remember besides to assign an univocal net address in the current instruments net. (Ad 2nd level parameter).

Warning! With this configuration auxiliary relay is disabled.

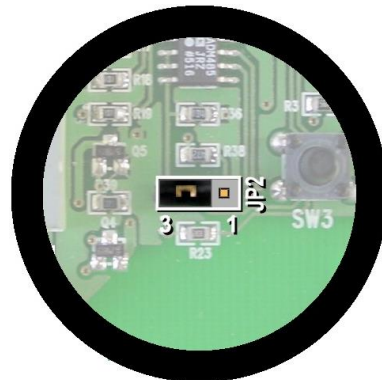**AUX/Alarm relay selection:**

Insert the jumper JP2 in 2-1 position and set the 2nd level variable AU to a value different from 3 and 7 according to the needed function. Clamps of configurable relay clean contact are on AUX/ALL output, on board of electronic board.

Warning! With this configuration RS485 connection is disabled.

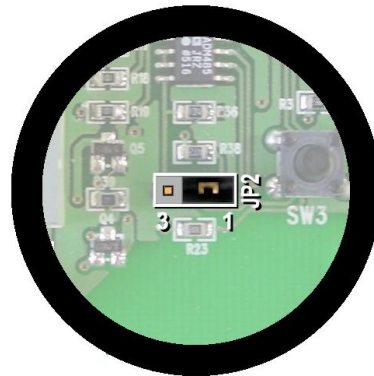

CHAPTER 7: TROUBLESHOOTING

7.1

TROUBLESHOOTING

In the event of any anomalies the ECP200 system warns the operator by displaying alarm codes and sounding the warning buzzer inside the control panel. If an alarm is tripped the display will show one of the following messages.

ALARM CODE	POSSIBLE CAUSE	SOLUTION
E0	<i>Cold room temperature sensor not working properly</i>	<ul style="list-style-type: none"> • Check that cold room temperature sensor is working properly • If the problem persists replace the sensor
E1	<i>Defrost sensor not working properly</i> (In this case defrosts will last time d3)	<ul style="list-style-type: none"> • Check that defrost sensor is working properly • If the problems persists replace the sensor
E2	<i>Eeprom alarm</i> An EEPROM memory alarm has been detected (All outputs except the alarm one are deactivated)	<ul style="list-style-type: none"> • Switch unit off and back on
E8	<i>Man in cold room alarm</i>	<ul style="list-style-type: none"> • Reset the alarm input inside the cold room
Ec	<i>Compressor protection tripped</i> (e.g. thermal protection or max pressure switch) (All outputs except the alarm one – where applicable – are deactivated)	<ul style="list-style-type: none"> • Check that compressor is working properly • Check compressor absorption • If the problem persists contact the technical assistance service
Ed	<i>Open door Alarm.</i> When the door is opened and after tdo time, it's setted back the normal functioning giving door open alarm (Ed)	<ul style="list-style-type: none"> • Check door switch status • Check door switch connections • If the problem persists contact the technical assistance service
Temperature shown on display is flashing	<i>Minimum or maximum temperature alarm.</i> The temperature inside the cold room has exceeded the min. or max. temperature alarm setting (see variables A1 and A2, user programming level)	<ul style="list-style-type: none"> • Check that the compressor is working properly. • Sensor not reading temperature properly or compressor start/stop control not working.

APPENDICES

A.1

EC declaration of conformity

COSTRUTTORE / MANUFACTURER:



PEGO S.r.l. Via Piacentina, 6/b 45030 Occhiobello (RO) – Italy –
Tel. (+39) 0425 762906 Fax. (+39) 0425 762905

DENOMINAZIONE DEL PRODOTTO / NAME OF THE PRODUCT:

MOD.: ECP200 EXPERT + BASE 4 A

IL PRODOTTO E' CONFORME ALLE SEGUENTI DIRETTIVE CE:

THE PRODUCT IS IN CONFORMITY WITH THE REQUIREMENTS OF THE FOLLOWING EUROPEAN DIRECTIVES:

Direttiva Bassa Tensione (LVD):	2014/35/UE
Low voltage directive (LVD):	2014/35/EU
Direttiva EMC:	2014/30/CE
Electromagnetic compatibility (EMC):	2014/30/EU

LA CONFORMITA' PRESCRITTA DALLA DIRETTIVA E' GARANTITA DALL'ADEMPIMENTO A TUTTI GLI EFFETTI DELLE SEGUENTI NORME (comprese tutte le modifiche):

THE CONFORMITY WITH THE REQUIREMENTS OF THIS DIRECTIVE IS TESTIFIED BY COMPLETE ADHERENCE TO THE FOLLOWING STANDARDS (including all amendments):

Norme armonizzate: **EN 60204-1:2006, EN 61439-1:2011, EN 61000-6-1:2007, EN 61000-6-3:2007**
European standards: **EN 60204-1:2006, EN 61439-1:2011, EN 61000-6-1:2007, EN 61000-6-3:2007**

IL PRODOTTO E' COSTITUITO PER ESSERE INCORPORATO IN UNA MACCHINA O PER ESSERE ASSEMBLATO CON ALTRI MACCHINARI PER COSTITUIRE UNA MACCHINA CONSIDERATE DALLA DIRETTIVA: 2006/42/CE "Direttiva Macchine".


THE PRODUCT HAS BEEN MANUFACTURED TO BE INCLUDED IN A MACHINE OR TO BE ASSEMBLED TOGETHER WITH OTHER MACHINERY TO COMPLETE A MACHINE ACCORDING TO DIRECTIVE: EC/2006/42 "Machinery Directive".

Occhiobello (RO), 01/04/2016

Paolo Pegorari
Rappresentante Legale


ECP200 EXPERT+BASE4 WIRING DIAGRAM

A.2

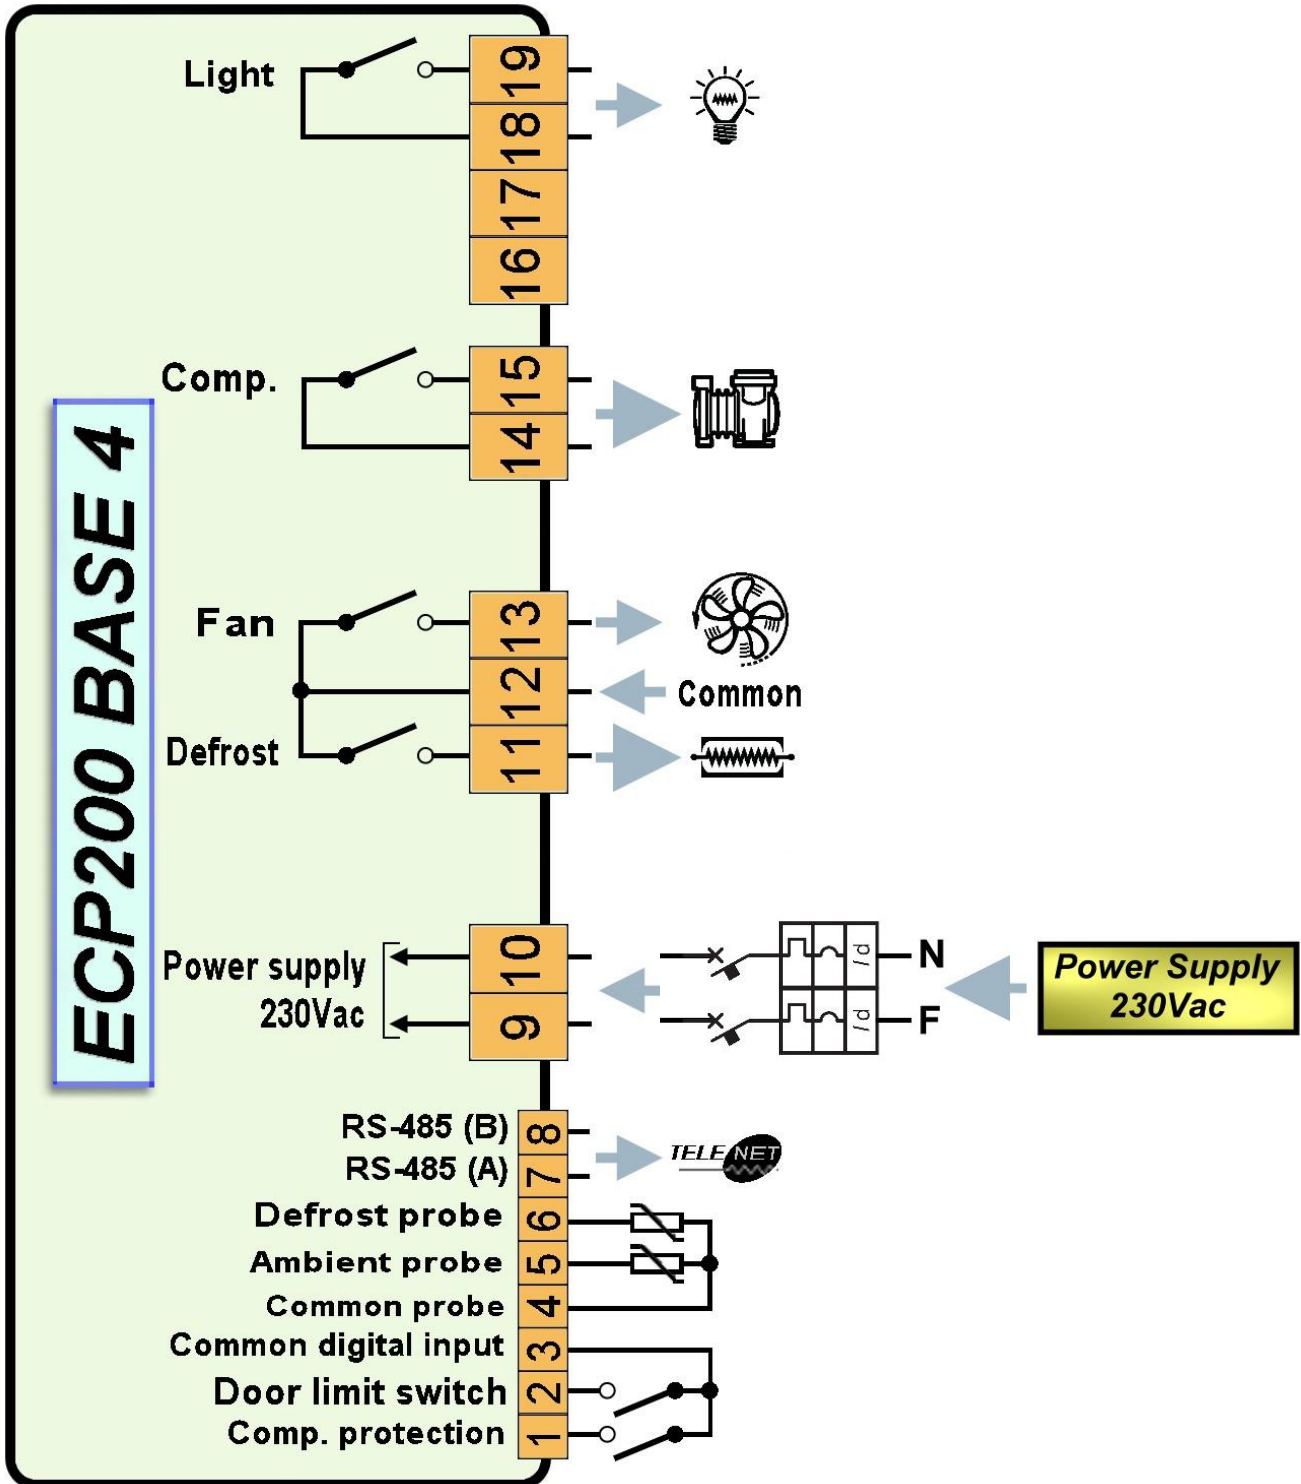


A.3

ECP200 EXPERT+BASE4A WIRING DIAGRAM

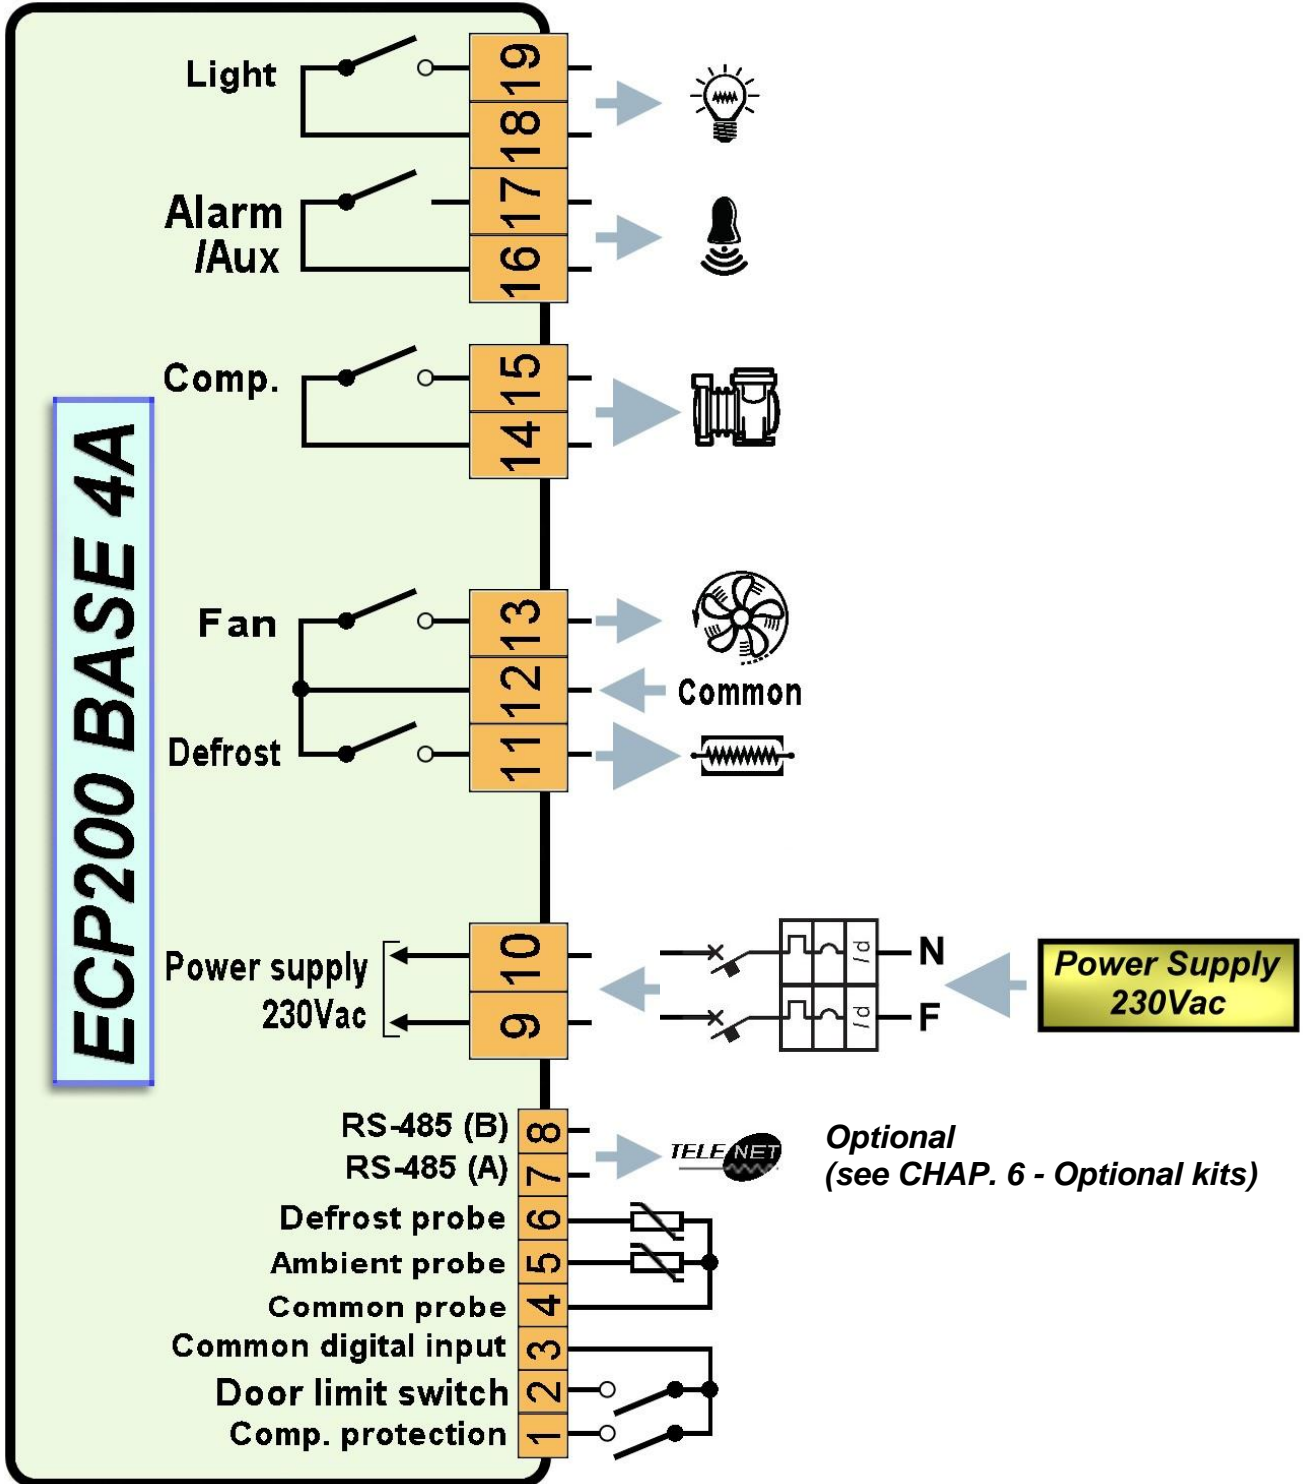


A.4

ECP200 EXPERT+BASE2 WIRING DIAGRAM

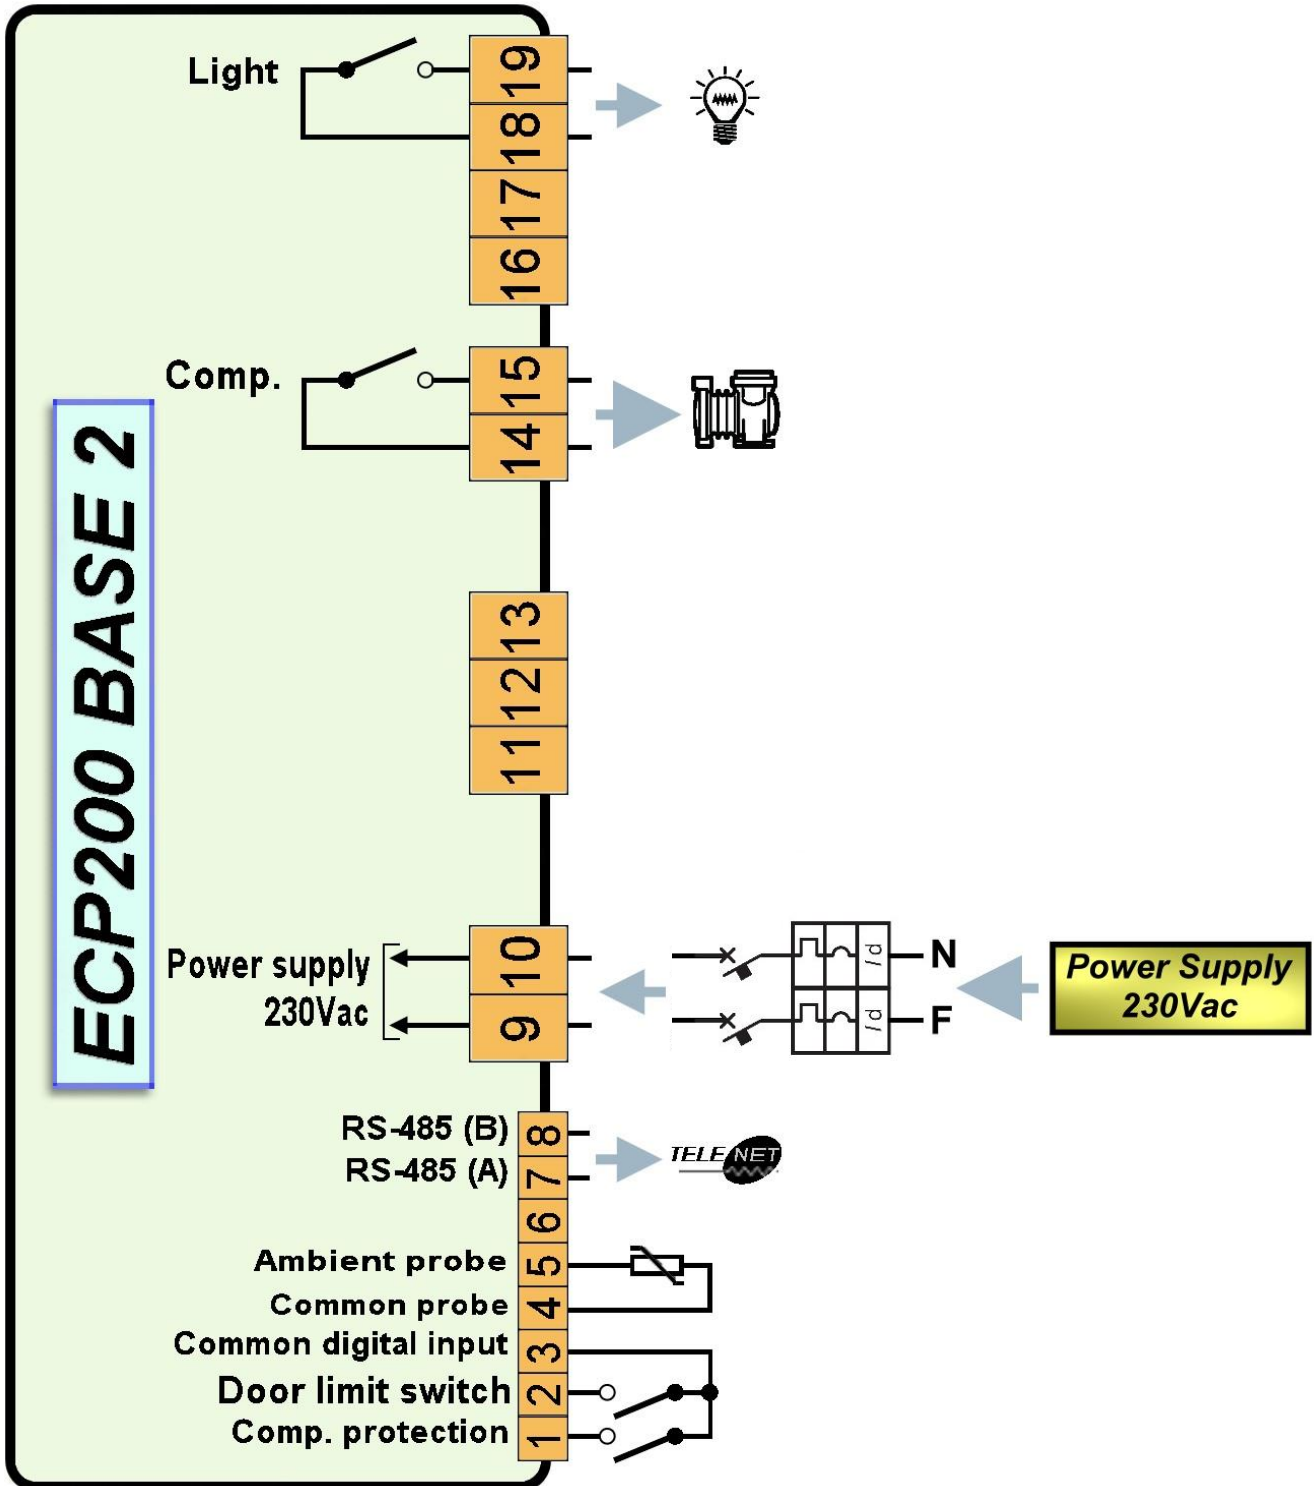


A.5

ECP200 EXPERT+BASE2A WIRING DIAGRAM

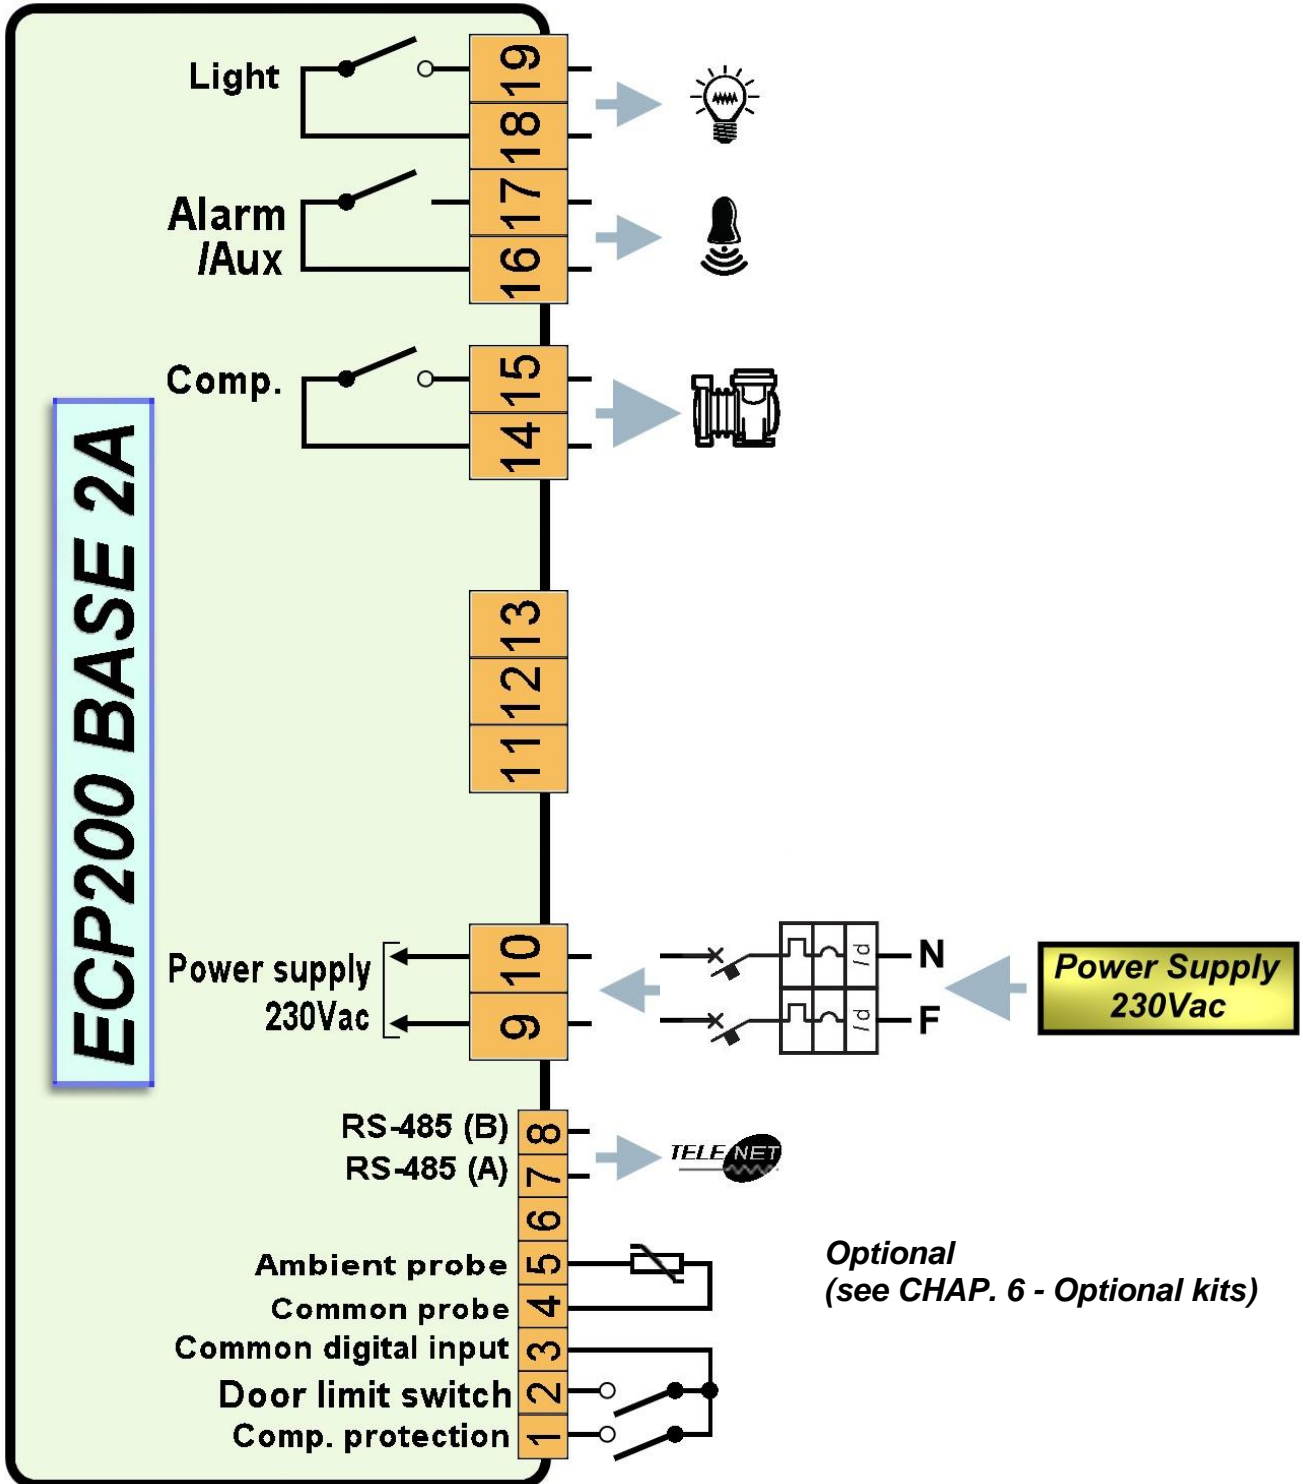


A.6 CONNECTION EXAMPLE (1) - ECP200 EXPERT+ BASE4 / BASE4A

Connection with outputs powered for direct control of functions.

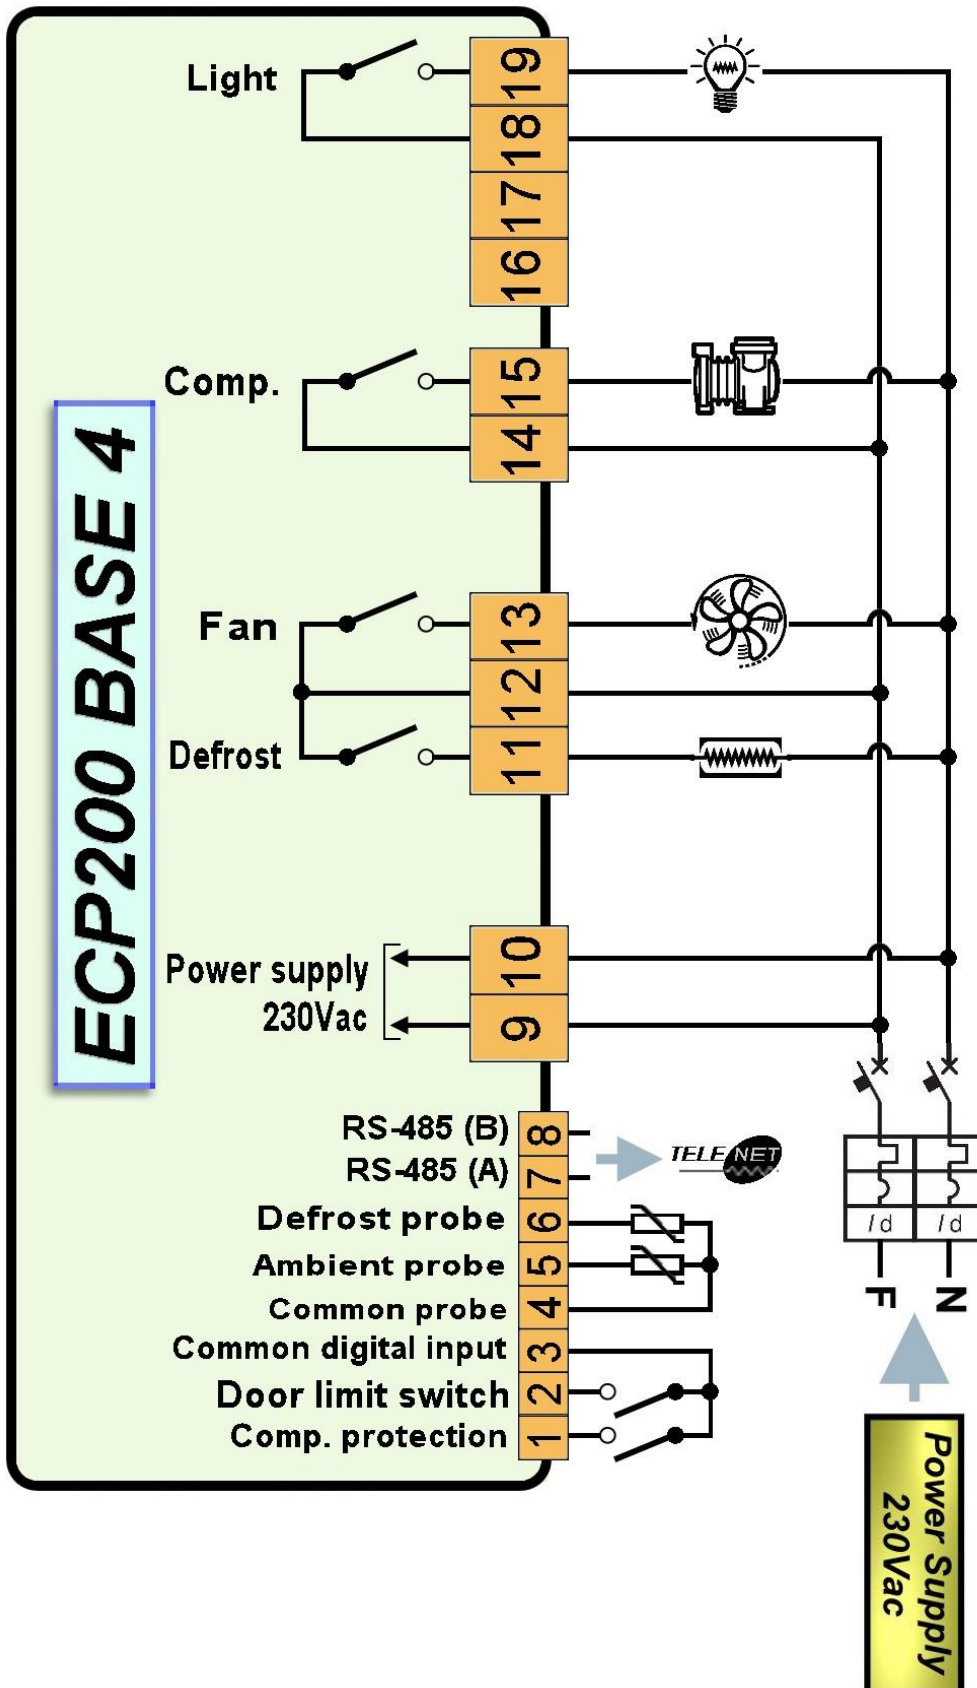


A.7 CONNECTION EXAMPLE (2) - ECP200 EXPERT+BASE4 / BASE4A

Mixed connection with on/off contact to enable towards condensing unit power board and fan, light and defrost outputs powered for direct control.

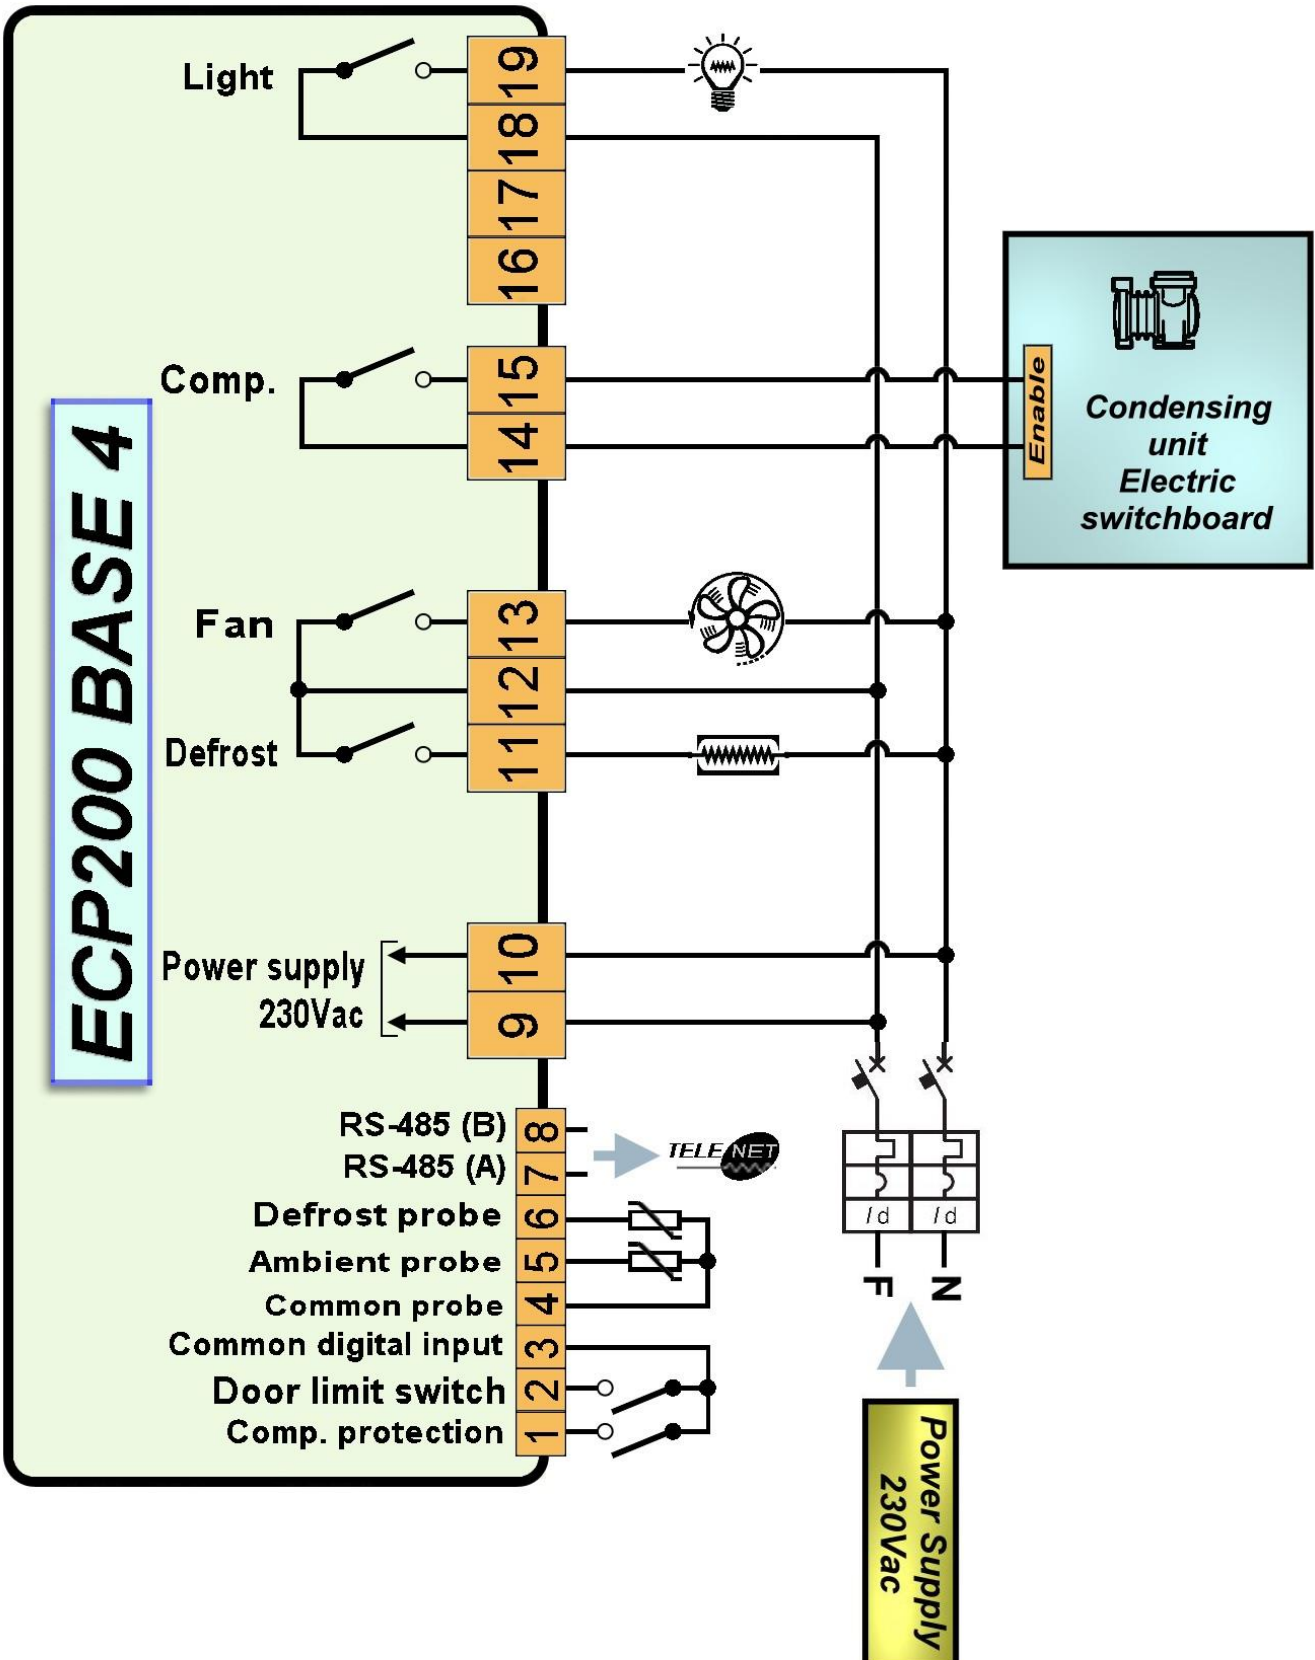


A.8 CONNECTION EXAMPLE (3) - ECP200 EXPERT+BASE2 / BASE2A

Connection with outputs powered for direct control of functions.

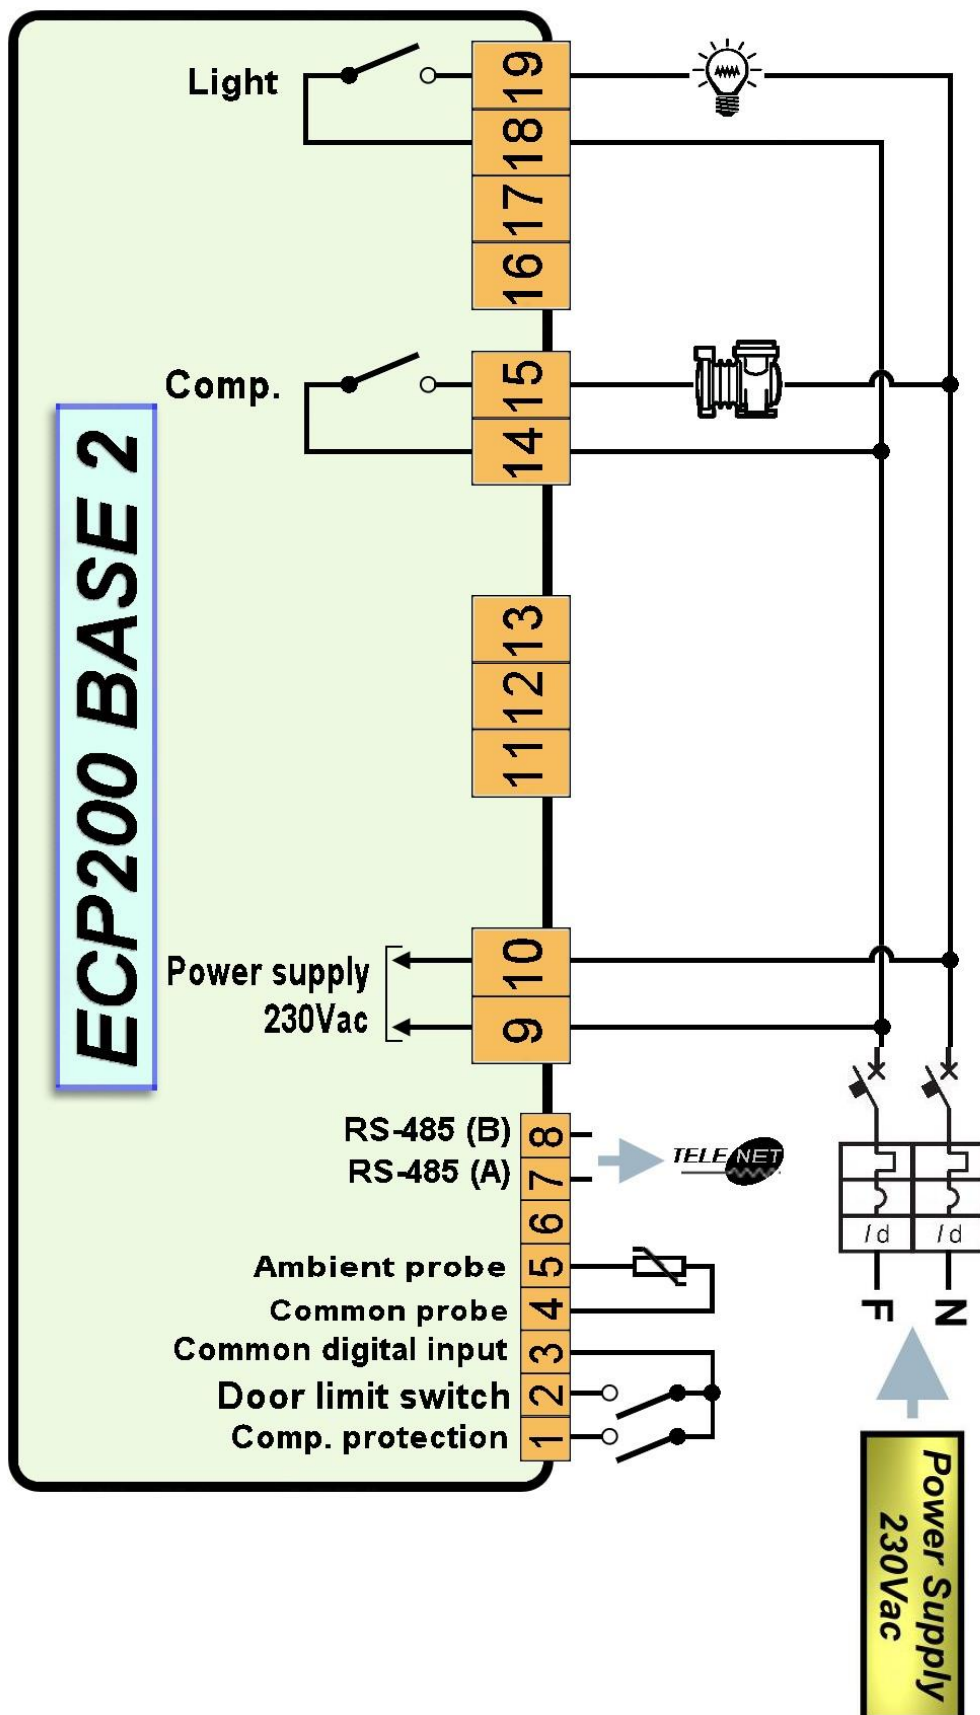

A.9 CONNECTION EXAMPLE (4) - ECP200 EXPERT+BASE2 / BASE2A

Mixed connection with on/off contact powered to enable towards room power board and light output powered for direct control.

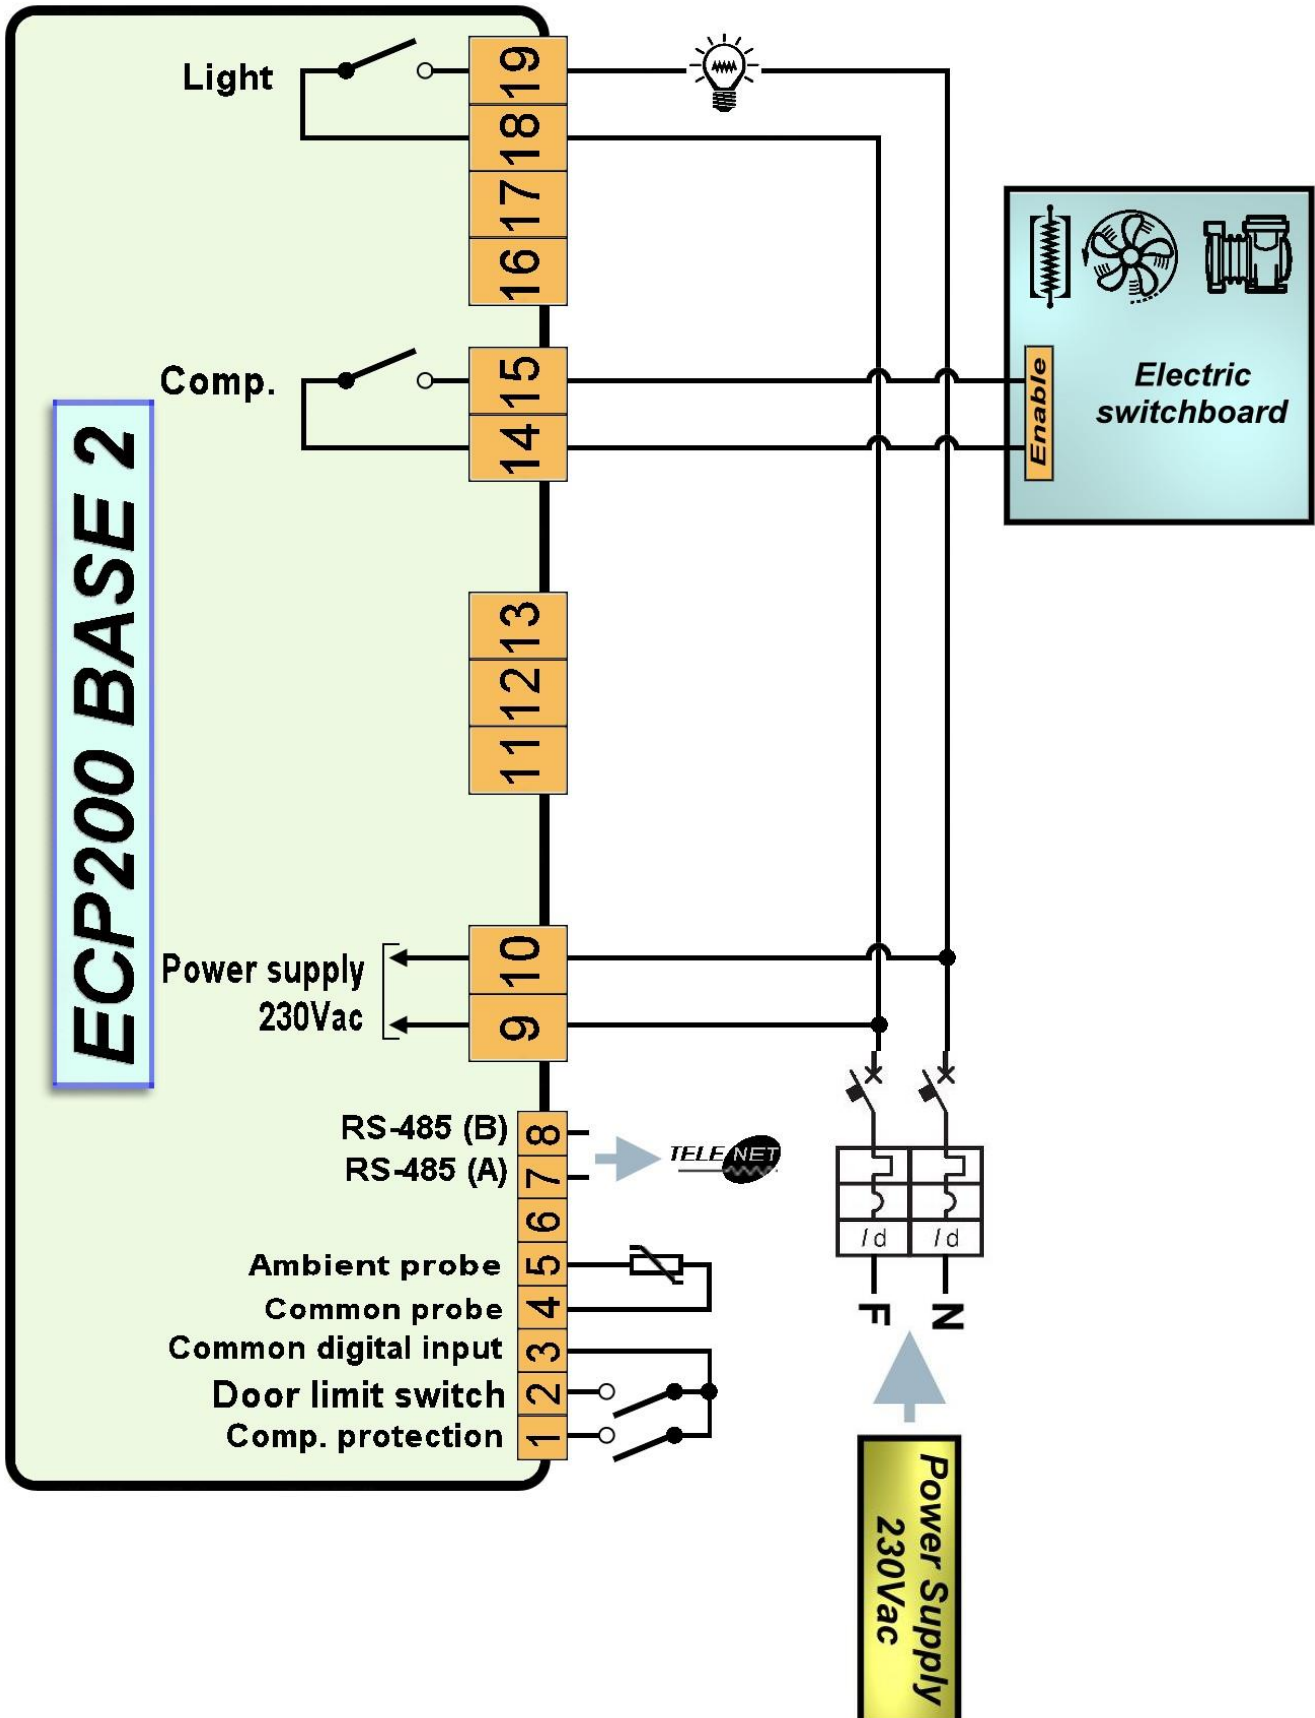



PEGO S.r.l.

Via Piacentina, 6/b

45030 OCCHIOBELLO –ROVIGO-

Tel : 0425 762906

Fax: 0425 762905

www.peggo.it

e-mail: info@peggo.it

Distributor: